



Décowood®

With regard to the routine cleaning of the floor, Déco recommends that you proceed with cleaning using a brush with soft plastic bristles and the use of a solution of 2/3 water and 1/3 degreaser such as Chanteclair.

Once the floor has been soaped and cleaned, it is recommended to proceed by rinsing abundantly with lukewarm water on the treated surface.

For more difficult to remove stains that should resist this initial treatment, Déco recommends using a solution of 2/3 water and 1/3 bleach.

always cleaning with a soft bristle brush and taking care to rinse thoroughly. once the treatment is complete.

In addition, there is a spray cleaner within the Déco product range specifically to remove localised grease stains.